


15-2135 Replacing starter ring gear speed sensor

Operation no. of operation texts and work units or standard texts
and flat rates:
15-2135

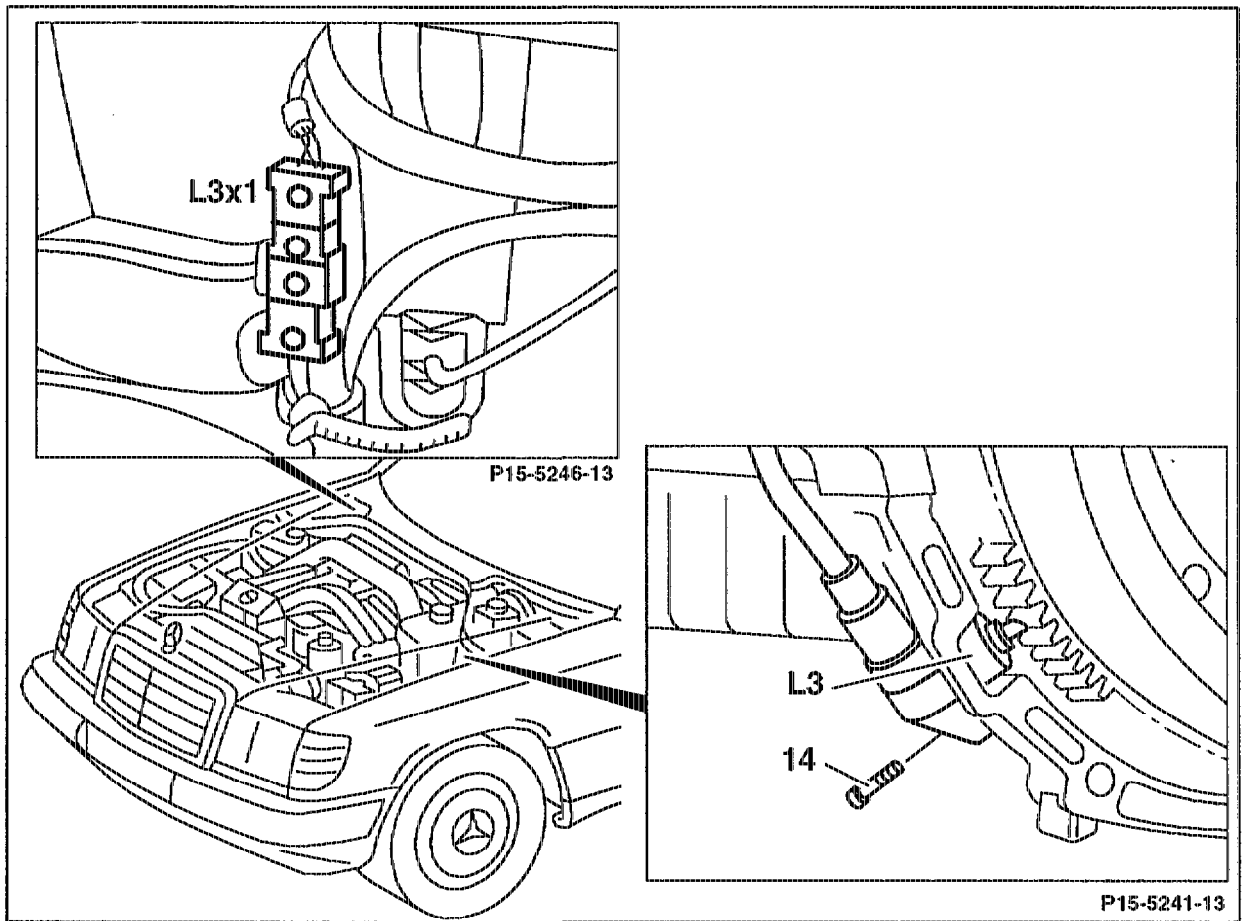

Bottom part of noise encapsulation	unbolt, bolt on.
Bolt (14)	unscrew, screw in. Tightening torque 10 Nm as reference value.
Starter ring gear speed sensor (L3)	remove, install.
Plug connection (L3x1) of starter ring gear speed sensor (L3)	separate, connect.