


49-7280 Removing and installing exhaust system downstream of flanged connection

Operation no. of operation texts and work units or standard texts and flat rates:
49-7280

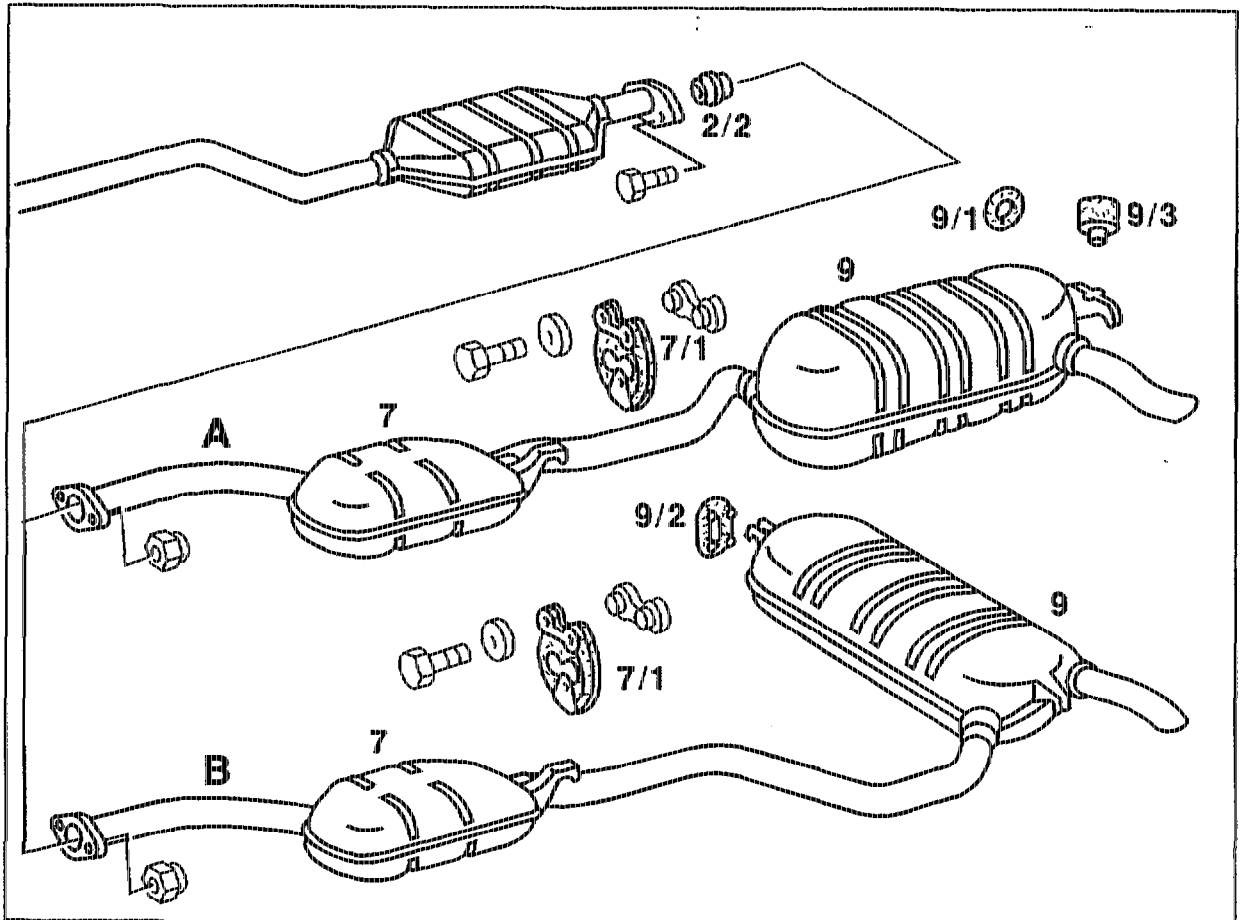

P49-5090-57

- A Sedan
- B Station Wagon

Flanged joints at catalytic converter or front exhaust system detach, attach. To do this, unscrew bolts, screw in.
Tightening torque 20 Nm as reference value.

Note

Rubber mounts (7/1, 9/1, 9/2) detach, attach; replace if necessary.
Center muffler (7) and tail muffler (9) pull out, insert.

Seal (2/2) check suitability for re-use, replace if necessary.

Installation note

Clean all connection points if necessary with emery cloth to remove combustion and corrosion residues.

Sedan

Bump stop (9/3) examine, replace if necessary.

All models

Leaktightness of all connection points check with engine running.