



68-205 Removal and installation of lateral trim on center console

Self-made tool

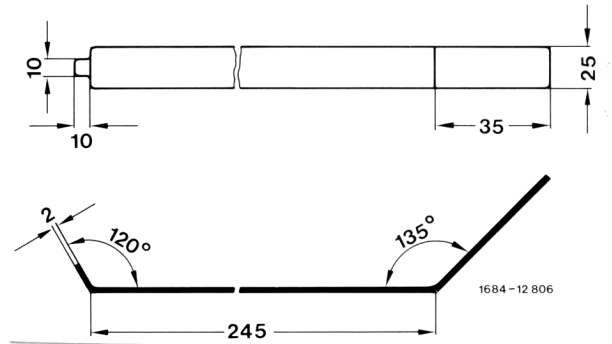

1 Remove floor mat and damping in driver's compartment.


2 Remove floor mat and damping in driver's compartment. Unscrew front fastening screw left and right.

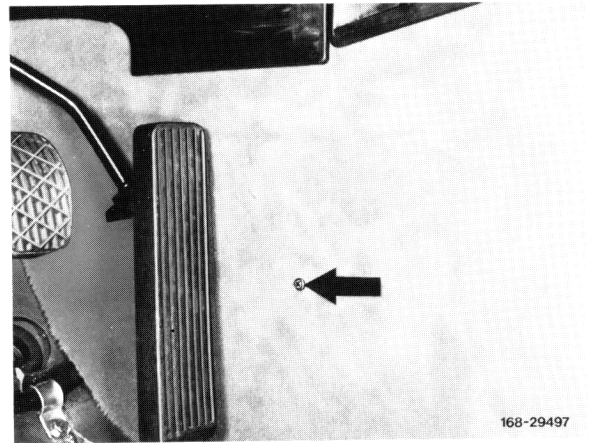

3 Mark location of holding links on center console.

4 Disengage holding links with special tool and pull out tunnel lining.

Note: Use offset end with 135° for removal, the other end with 120° for installation.

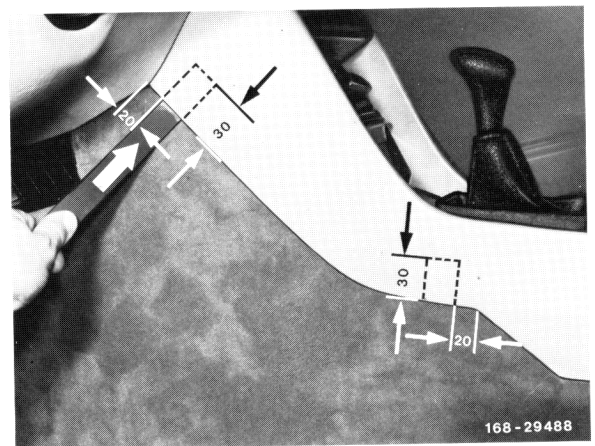

Installation

- 5 Push holding link outward with special tool and introduce.
- 6 For further installation proceed vice versa.

