


01-2240 Checking rear of engine for leaks when running

Preceding work:
Driven plates removed (03-4100).

Transmission 722.3

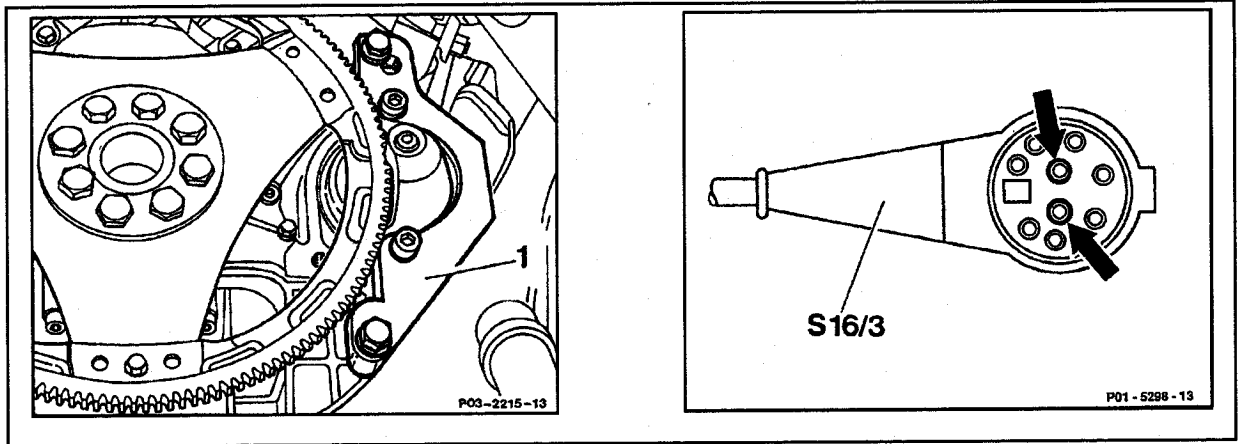

P01-5801-53

Rear of engine	clean.
Dried surrounding area	spray with Mercedes-Benz white contrast spray, part no. 000 989 03 59.
Oil level in engine	check, adjust to correct level (18-0020).
Driven plates with ring gear	install (03-4100).
Starter with bracket (1)	bolt to crankcase, special tool 119 589 00 40 00.
Engine in installation position	support at rear and secure.
Automatic transmission	bridge contact at starter lockout switch (S16/3) (arrows).
Engine	start, check for leaks.

Note

Stored faults which may originate from testing work involving disconnecting wiring or simulation, must be erased in the fault memory after completing work.