ſ				
	C18	WF00.00-X-1000Z	Shop-made tools	28.6.99


WF58.50-P-1840-01A	Oil filter cap with connection hole for measuring oil pressure	Engine 604, 605, 606	D18
WF58.50-P-2020-01A	Connection fitting for automatic transmission fluid pipes	All engines	E18
WF58.50-P-0110-01A	Guard plate for radiator/condenser		F18

١	D18	WF58.50-P-1840-01A	Oil filter cap with connection hole for	Engine 604, 605, 606	₩F
			measuring oil pressure		

For connecting an oil pressure gauge.

Drill a connection hole with thread at a replacement oil filter cap to enable the connection fitting of the oil pressure gauge to be screwed in.

Diameter of thread M12×1.5.

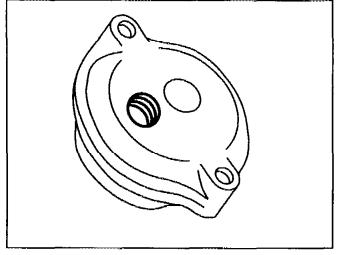


P58.50-0200-01

E18	WF58.50-P-2020-01A	Connection fitting for automatic	All engines	₩F
		transmission fluid pipes		

Shop-make double threaded union (01) for short-circuiting ATF feed and return pipes, e.g. from DIN parts.

Diameter of thread M14×1.5.

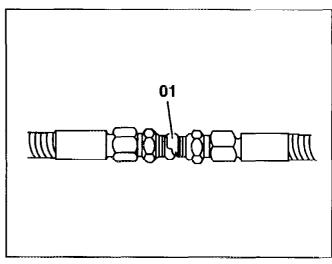

P20.30-0004-01

C18

WF00.00-X-1000Z

₩F

4

F18 wf58.50-P-0110-01A Guard plate for radiator/condenser

Shop-make guard plate from sheet metal or plastic with the approximate dimensions 400 x 680 x 1 mm.

Attach appropriate retaining bar to the plate for attaching it to radiator of condenser.